

FITTING INSTRUCTIONS

Suits: EB(2/92)-AU Falcon (non IRS).


Kit contents:

Replacement arms	x 2	Washers	x 4	Instruction Sheet	x 1
Stepped Crush Tubes	x 4	Spiral Tube	x 2	Grease Satchel	x 1

N.B: These instructions should be used in conjunction with workshop manual.

1. Raise the rear of the vehicle and place the jack stands under the chassis. Support the differential so as to be able to remove the rear lower trailing arms safely.
2. Remove ONE lower trailing arm at a time.
3. When fitting the replacement trailing arm ensure the thin flange of the front and rear bush, the step on the crush tube and the supplied washers are fitted to the inboard or centre of the vehicle. As per diagram below.
4. Grease the outer flanges and chassis contact points with the grease supplied.
5. For other trailing arm repeat steps 2 – 4.
6. Retention all removed bolts to manufacturers specifications.

Note: Holes in the replacement arms are the securing point for the A.B.S. cabling. When securing the cabling please use the cable wrap supplied.

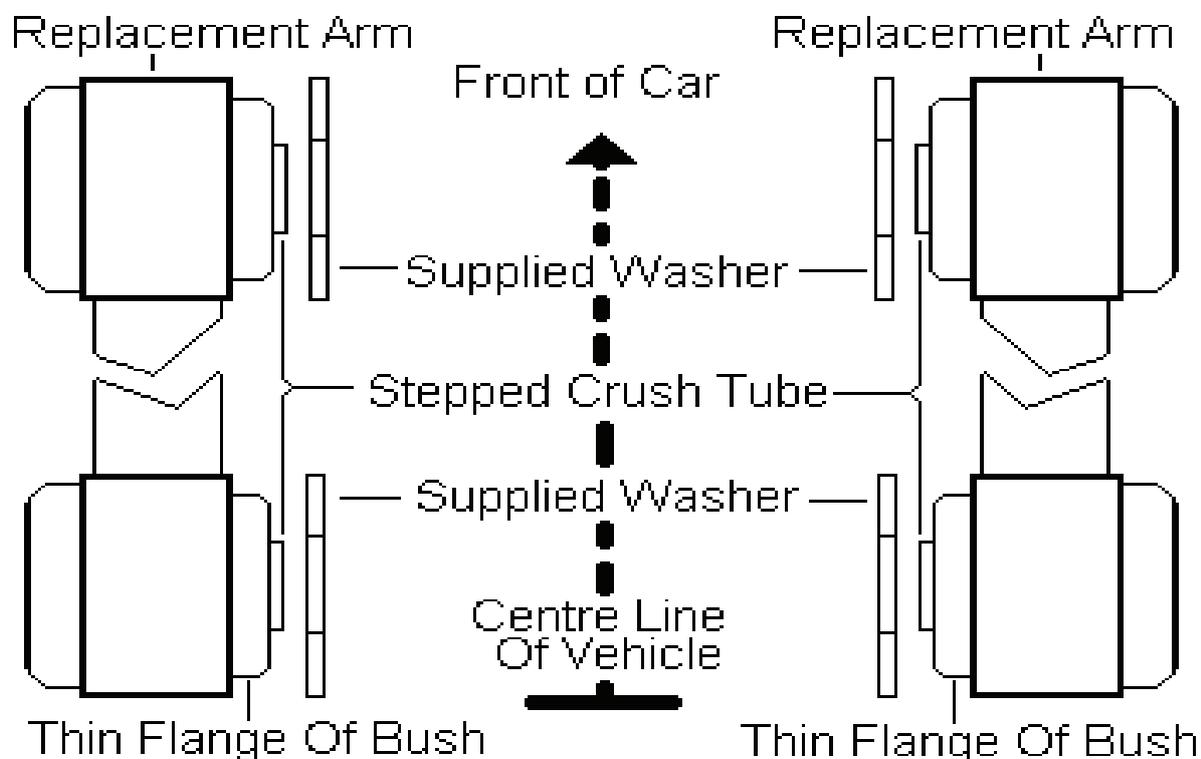

N.B: It is recommended that a licenced workshop or trades person carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.