


RADIUS ROD BUSHES

1. Support the vehicle. Remove the radius rod by undoing large end nut. Remove bumpstop at wishbone.
2. Clean all old rubber deposits from subframe eye and retaining washers. Reassemble, taking care to locate bushes with large ends facing inwards towards each other (see diagram).
3. Lubricate both ends of each bush and internal bores with grease supplied. Complete reassembly as per workshop manual.

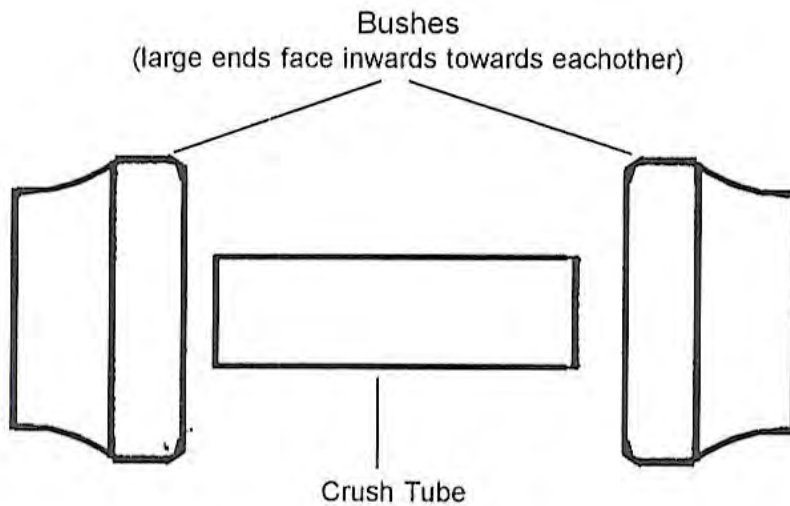

This procedure must be carried out by a qualified person