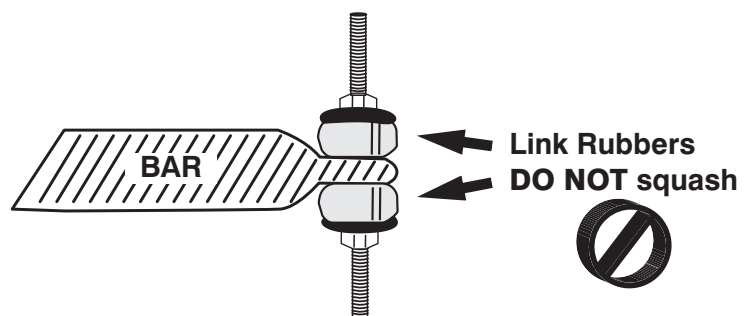
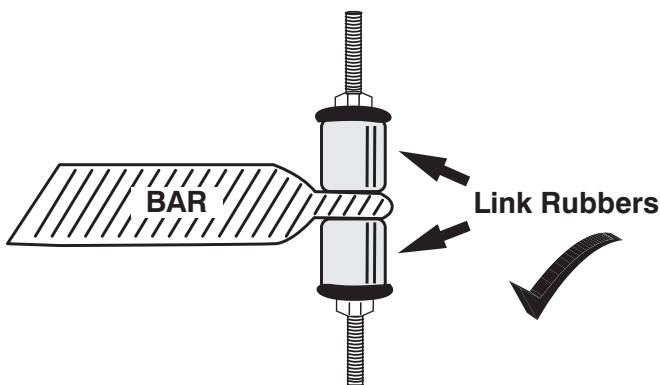

FITTING INSTRUCTIONS

Corolla KE 10-11 15 & 17 FRONT BARS

This bar was designed to mount under the front section of the vehicle with the arms trailing back for links to drop down to the front of the lower control arms.

Note: Swaybar should be installed with vehicle at normal ride height.

- (1) Remove bolts from chassis brackets and lower control arm link brackets.
- (2) Install links through eyes of swaybar as per drawing below.
- (3) Position brackets outside chassis rail and mark holes making sure links are vertical when viewed from the front and side of the vehicle.
- (4) Drill 4 holes through the chassis and bolt swaybar into position. Mark and drill through front edge of lower control arms and mount link brackets.
- (5) Check that the swaybar is centrally located and tighten all nuts and bolts without overtightening link rubbers.



TOOLS REQUIRED for SWAYBAR FITMENT

2 – 1/2" Spanners.
1 – 9/16" Spanner.

KIT CONTAINS

1 Sway Bar.
2 Chassis Brackets.
3 Link Assemblies.

C23