Z 5036


Installation Guide Rear Differential - Front & Rear Bush Kit

Suits: Holden Commodore VE 08/06 on, Pontiac G8 08/06 on

(Always refer to the current catalogue for complete application listings)

N.B: This installation guide should be used in conjuction with the workshop manual.

All fastener torque settings should be adhered to.

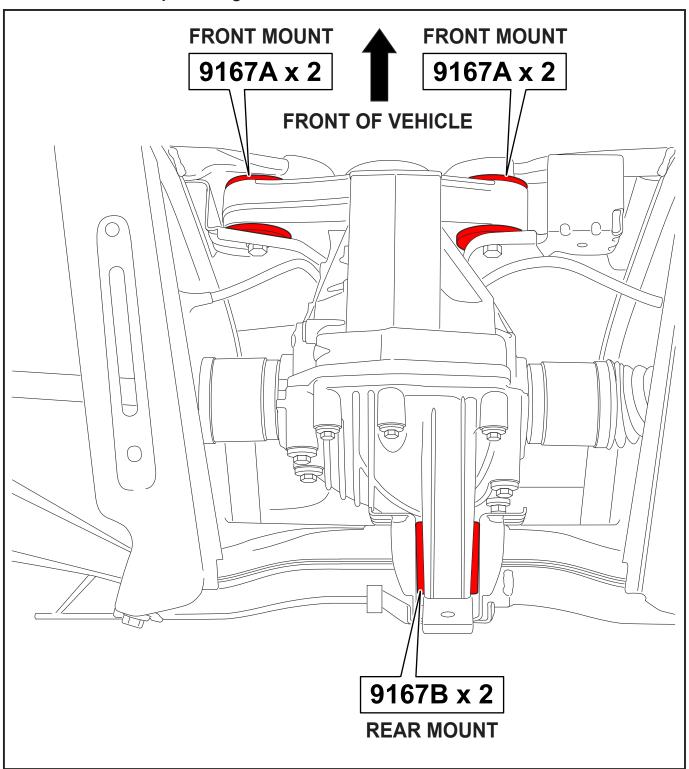

N.B: It is recommended that a licenced workshop or trades person carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.