


# Installation Guide Front Lower Control Arm Bush

Z5171

Suits: Subaru Liberty


*(Always refer to the current catalogue for complete application listings)*

**N.B:** This installation guide should be used in conjunction with the workshop manual.

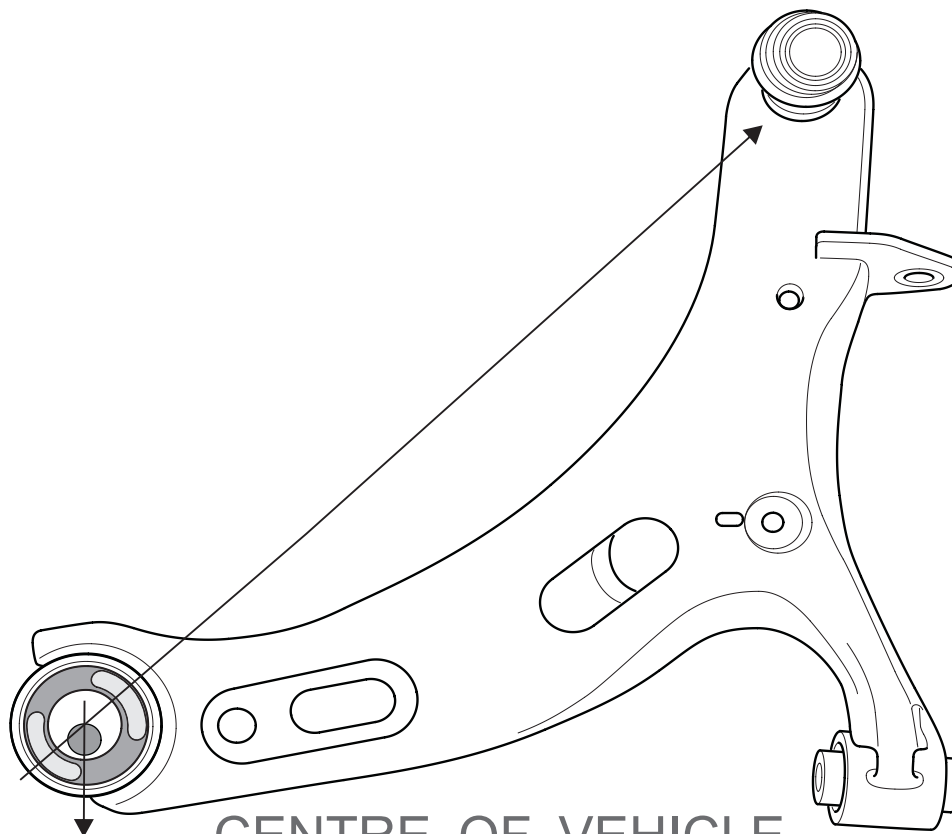


**FIG.1**

**CENTRE OF VEHICLE**

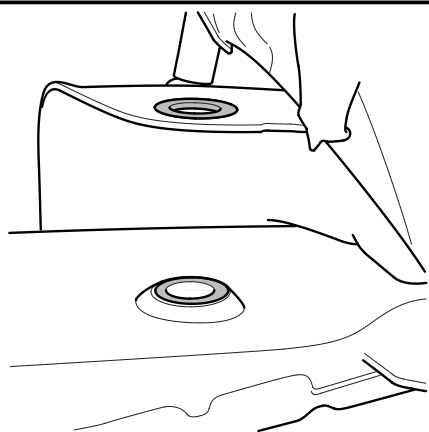

**FIG.2**

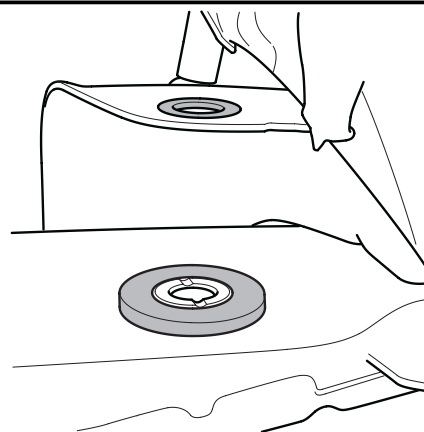

**FIG.3**

1. Install steel shell bush into the eyelet of the arm so that the bush is centralised in its position. Ensure the voiding is positioned towards the ball joint and the offset in crushtube is facing toward centre of vehicle as per fig.1.
2. Before installing the arm into the vehicle be sure to fit the supplied washers over the lower bolt hole mount as per fig.2 and 3.

**N.B:** It is recommended that a licenced workshop or trades person carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.