


# TOYOTA LANDCRUISER 70, 80, & 100 SERIES

Fitment for driver's side and passenger's side trailing arms to increase caster. Bush and Tube fitment is identical for both arms.

Lay the trailing arm on this template and mark the bush positions as indicated for both arms.

Press in the bush with the hole closest to the mark. Distance between hole centres must be  $185 \pm 0.5\text{mm}$  for easy fitting.

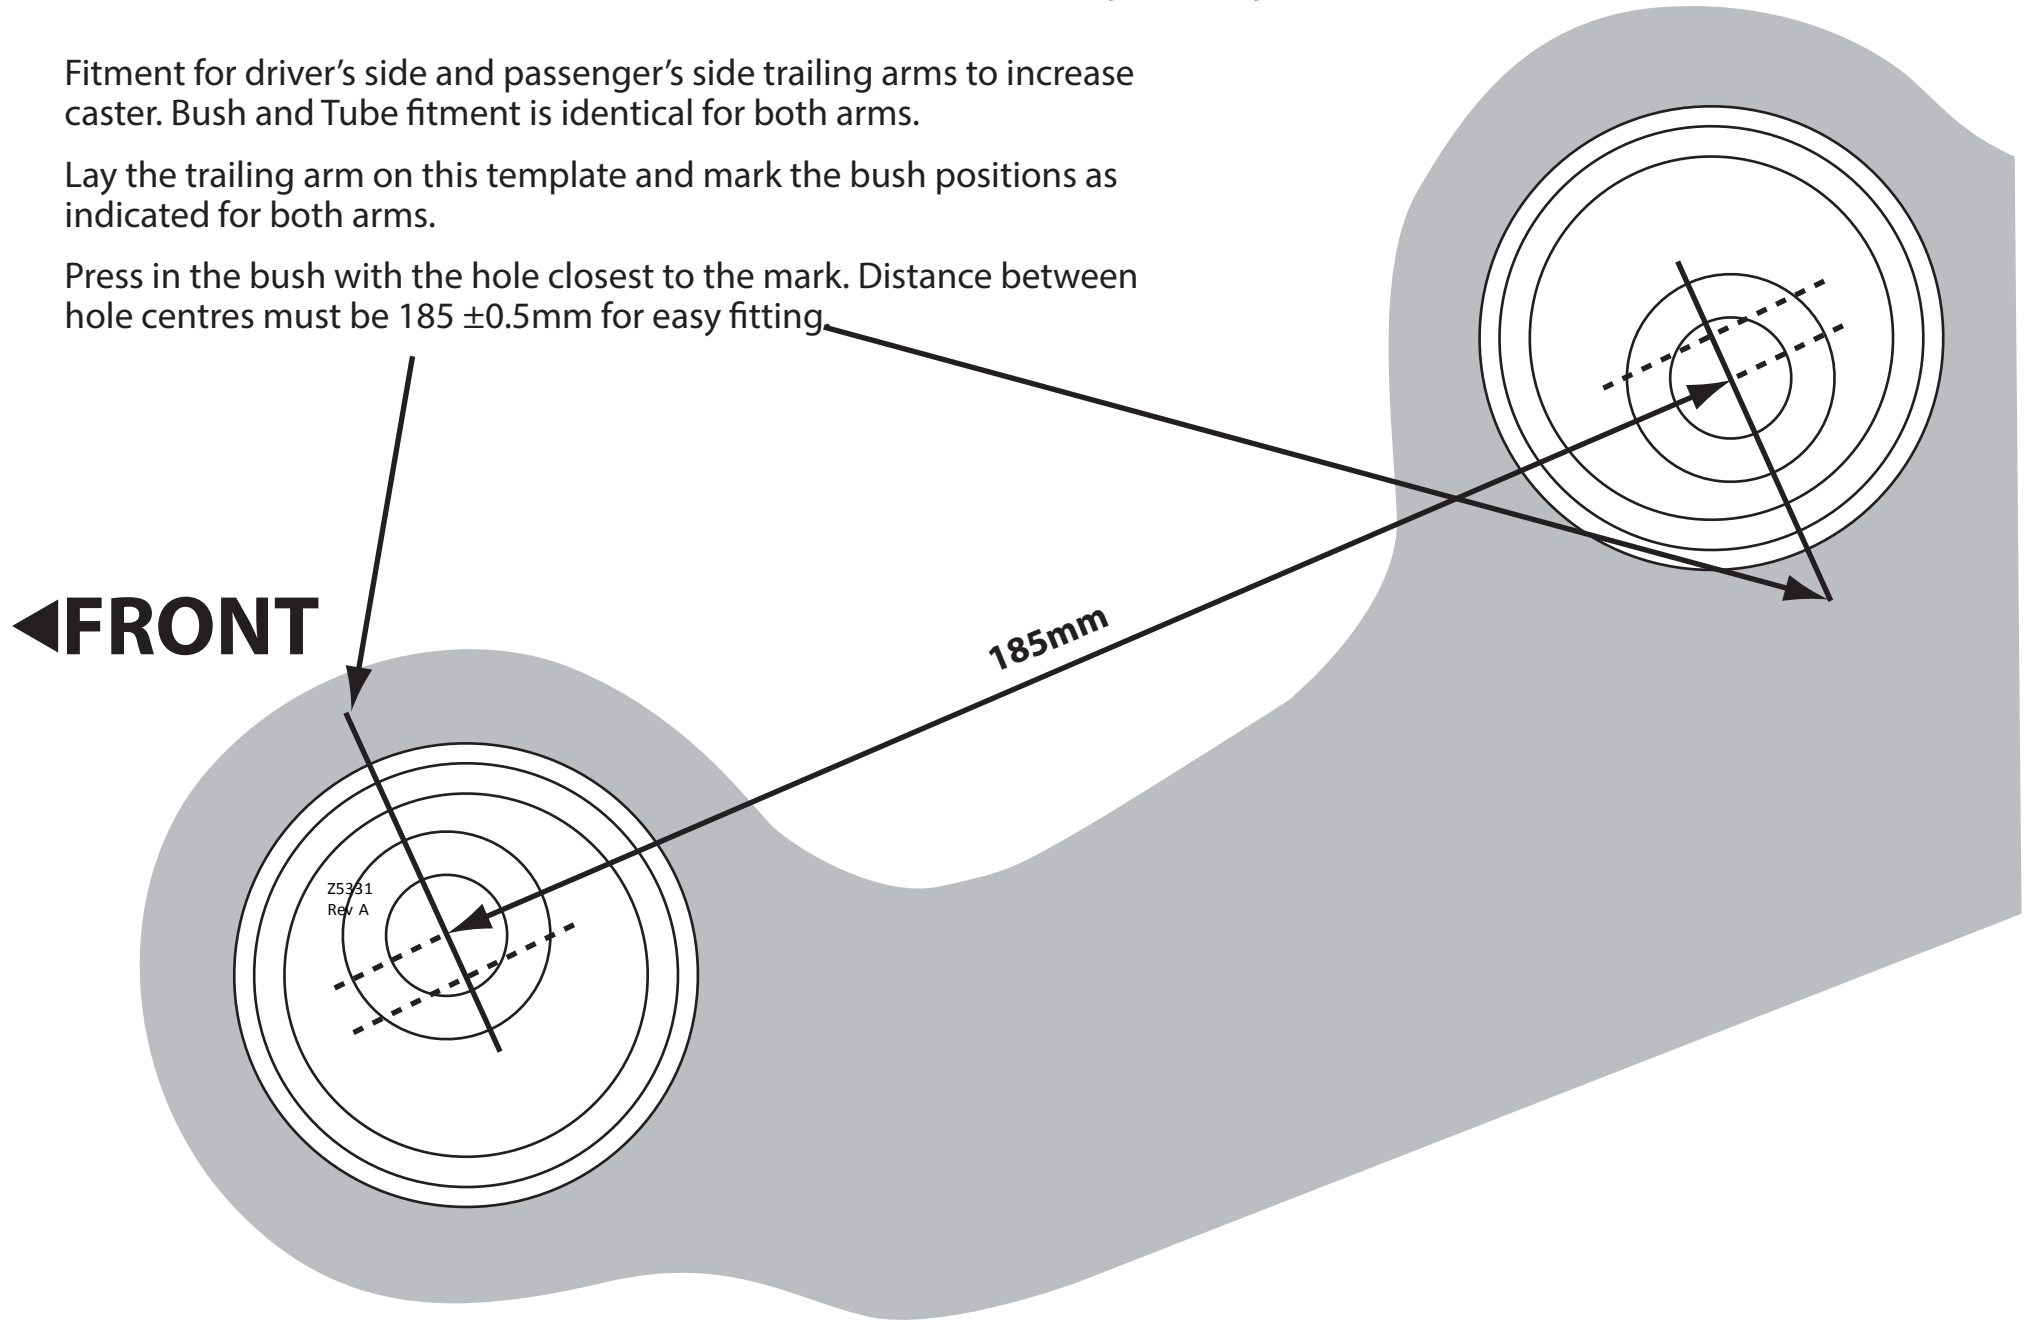

# NISSAN GQ AND GU PATROL

Fitment for driver's side and passenger's side trailing arms to increase caster. Bush and Tube fitment is identical for both arms.

Lay the trailing arm on this template and mark the bush positions as indicated for both arms.

Press in the bush with the hole closest to the mark. Distance between hole centres must be  $240 \pm 1\text{mm}$  for easy fitting.

